

Figure 5.1G



Figure 5.1H

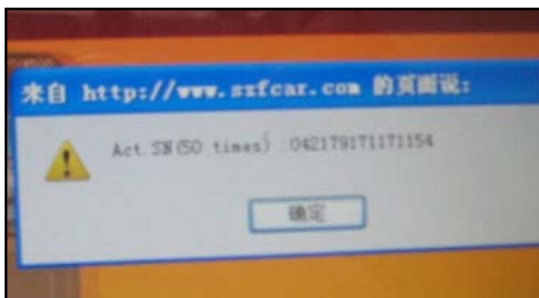


Figure 5.1 I

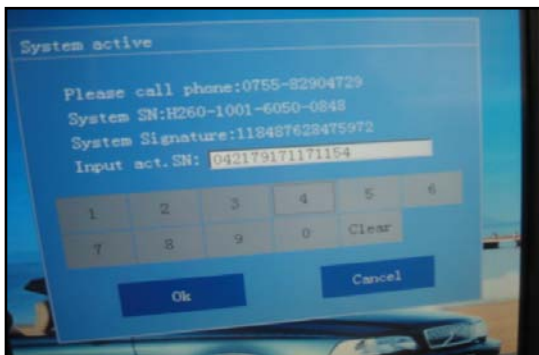


Figure 5.1J

## ● How To Activate:

Normally when customer received the product, the screen will pop up “You have \*\* times use”. Customer need do the system activation to use without any times limitation.

**Method 1 – From FCAR Website to active by yourself.**

**Method 2 – Send to FCAR company to active by the email.**

Method 1 :

- 1) Turn On your Main UNIT. Open the system activation menu. You will see the system Signature as shown Figure 5.1G
- 2) Open the FCAR company website and login in the member. Click System Activation in the left side of page, and input the System Signature of Main Unit. As shown in Figure 5.1H
- 3) Click the button “ Generation” , the page will popup the ACT SN. As shown in Figure 5.1 I
- 4) INPut the ACT. SN in the Main Unit As shown in Figure 5.1 J
- 5) Then Click the button “OK” , will popup activation success as shown in Figure 5.1 K
- 6) After activation success, you can use again. If you don't need use the product, Pls Turn Off the Main Unit.



Figure 5.1 K

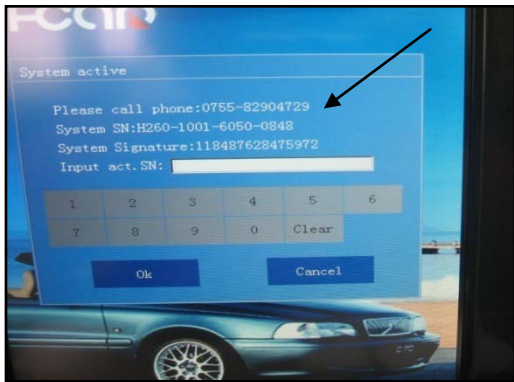


Figure 5.1 L

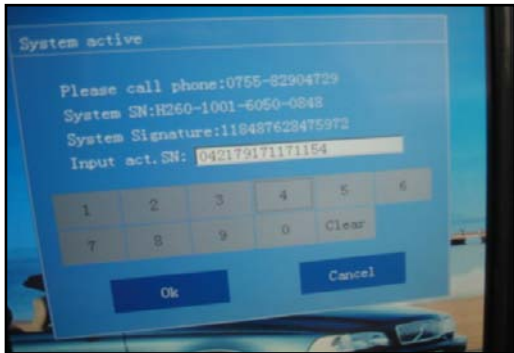


Figure 5.1 M

**Method 2 – Send to FCAR company to active by the email.**

- 1) Turn On your Main Unit , and Open the System Activation Menu. You will see the System signature (Figure 5.1 L ) , Pls send this number to FCAR company by email/Call, Then FCAR people will answer to you the “ ACT. SN ” number, such as the ACT SN is : 0421791711154 , after you receiving the number, Pls input it in the Main Unit.( Figure 5.1 M).
- 2) Then click button “OK” to active. Will popup the activation success. Then Turn off the Main Unit if don't use!!

NOTE: All operations will be finished in one time. During the activation, if you turn off the Main unit, Main unit will get a new system signature in the Activation menu. you can input the new system signature in the website to generate a new ACT SN to reactive again. In addition, don't keep the Main Unit always on powering for long